

Installation Guide For LMP91000 SensorAFE Software

The following guide will step a user through the process of installing the SensorAFE software on a compatible Windows XP / Windows 7 computer. This software can be installed prior to the availability of the hardware evaluation kit and used for understanding the capabilities of the LMP91000 product.


Upon receipt of the hardware evaluation kit please consult the SensorAFE Drivers Installation guide for instructions on installing the hardware which will allow the SensorAFE hardware to directly program and monitor the evaluation setup.

For the SensorAFE software, execute the installation program, NSC_SensorAFE_LMP91000_v1.0 which was available through the download.




You will see the installer's introduction window.

Click [Next>] to continue with the installation.

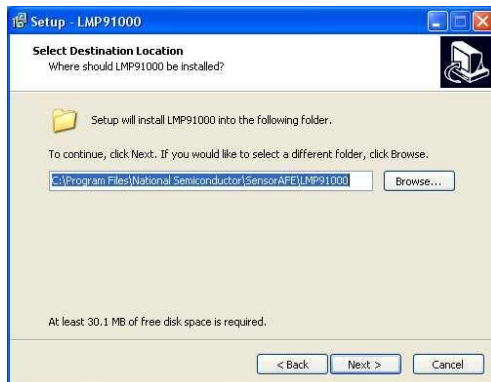


The installer will select a default location for the installation of the program. If you wish to change the location click the [Browse...] button and select a new installation location.

When you are satisfied with the choice click [Next>] to continue.

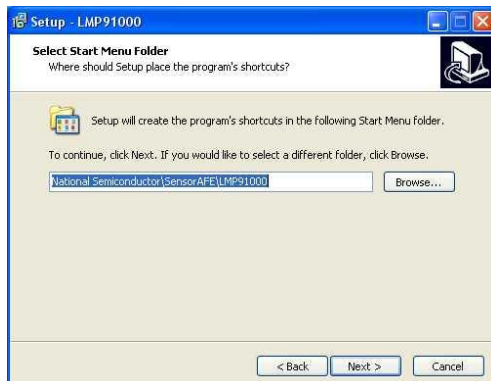


The installer will select a default location to list the program in the Windows Start Menu. If you wish to change the location click the [Browse...] button and select a new listing location.

When you are satisfied with the choice click [Next>] to continue.

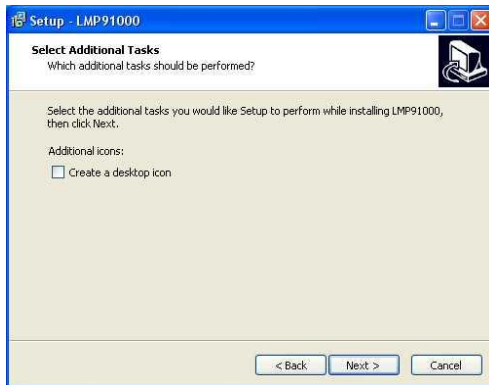


The installer will ask if you wish for a desktop icon to be created for a fast way to execute the program. If an icon is desired, please select the available box.

When satisfied with the selection click [Next>]

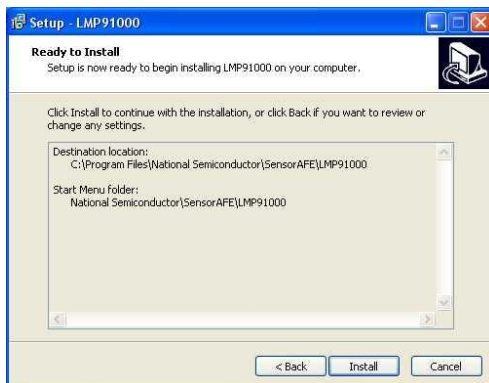

The installer now shows the planned locations for the software installation and the Start Menu locations.

To accept and begin the file installation click [Install].

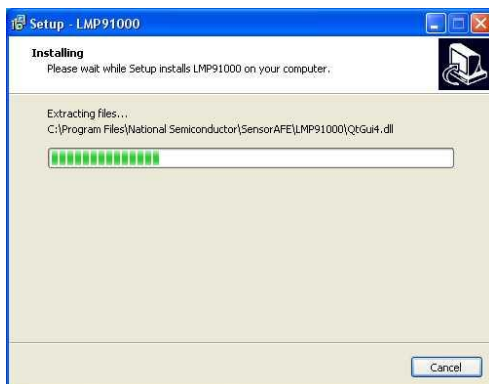

A progress screen shows the files being transferred to the proper locations on the system.



When the installation wizard reports the job as completed you can exit by clicking the [Finish] button.

You are now ready to run the SensorAFE software for the LMP91000 product, using either the location identified in the Start Menu step or the optional Desktop Icon, if requested.